



Master Catalogue Silk Series - 1



RXW[®]
GROUP

Silk Siva
Liquid Wallpaper





Silk Siva

Liquid Wallpaper



RXW
GROUP



400



401



402



403



404



405



406



407




408



409



410

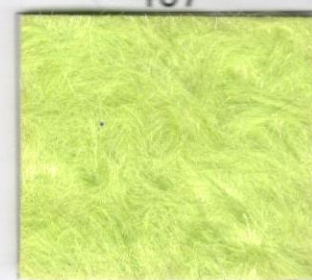

411



412



413




414



415



416

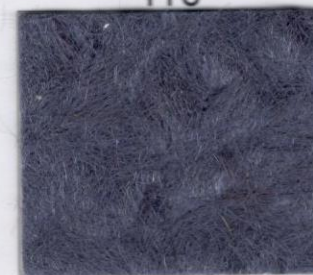

417




418



419



420

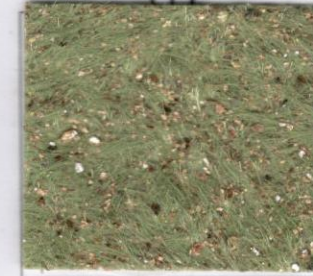

800




801



802

Glitters are not included in the set and are supplied separately


The samples presented do not fully reflect the colour and texture of the material because of their small size

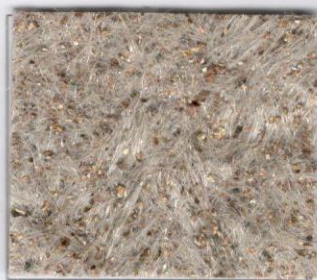


803




804

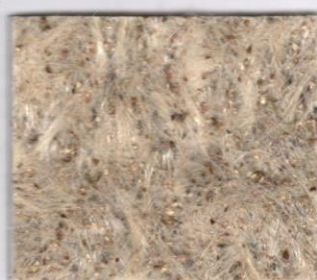


805

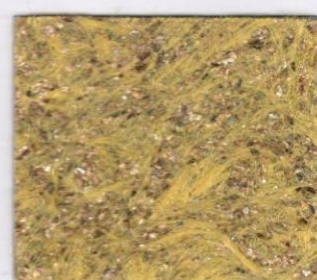

806

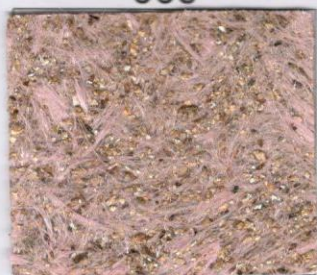

807

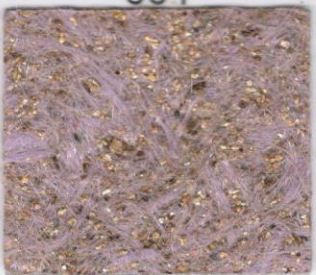


808




809



810

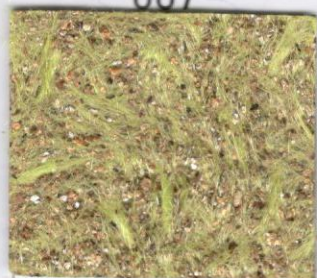


811

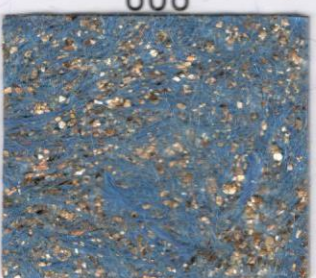

812




813

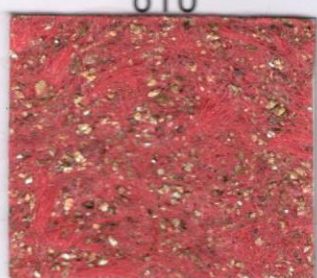

814




815

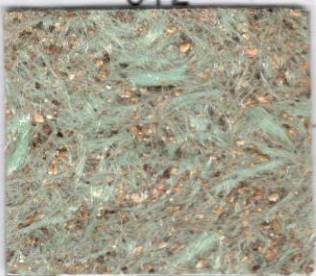


816



817

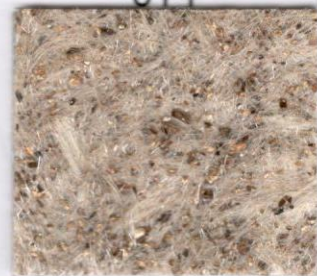


818

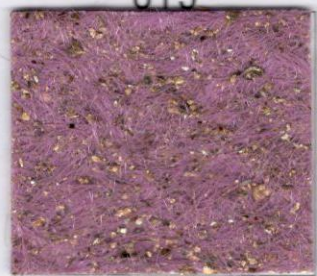

819



820

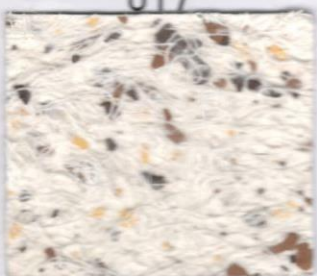


205




207




208

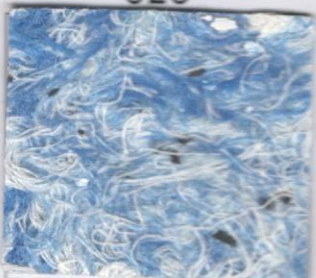

209

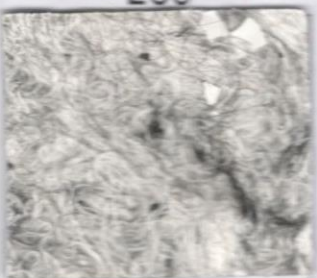

214

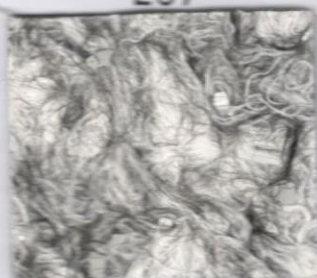

215

Carpet Links is based on silk fibers and designed for covering the interior of residential and commercial places.

It offers an advantage of high attachment tenacity with surface, elasticity and it can be used as decorative material for covering walls, ceilings, wood and non-rectilinear parts of the surface.

It combines the best advantages of traditional roll wallpapers and textile wallpapers. The product is ecologically clean.

Properties:

- Eco Friendly
- Seamless Surface
- Permeable Surface
- Heat Insulation
- Sound Insulation
- Frost Resistance
- Anti-Dust
- Hides a cracks and imperfections on walls
- Repairable

*T & c Applied

Surface Preparation:

- A surface must be clean and dry
- Old wallpaper, Whitewash and other metal parts must be removed. Parts of the surface which are dirty or peeling of must be cleaned
- One coat of acrylic primer is must for all surfaces (Mandatory)
- The surface must be smoothed with gypsum plaster and then coated with acrylic primer of high penetration (Optional)
- Fiber board of different kinds and plywood must be covered with white concentrated acrylic primer


Instructions on Application:

- Pour warm water in a bucket
- If available, add Glitter (Optional)
- Pour contents of the bag into the water
- Mix the material by hand or even better If you use Putty machine
- Soak the material for Min 1 Hr - Max 12 Hrs
- Immediately before applying, it must be manually mixed once again
- Take Trowel and start applying material on the surface left to right or Top to bottom.

Material Consumption: One package covers 45-50 Sft.

Storage Life : Life long

Time of Drying Out: 24-48 hours at +25°C, area must be ventilated.

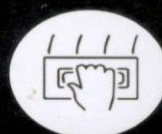

HEAD OFFICE

RXW GROUP

CARPET LINKS - BENGALURU - 560 003.